



# PIPELINE COMPONENTS

## ADAPTOR PLATE FOR REACTORS

When reactors have a curved end nozzle, these adaptors are used as interface spacer to connect the glass/bellow with reactor.


A flat metal ring with rubber cushions is enveloped with PTFE, to provide ideal sealing. Only PTFE comes in the contact of process fluid.

Cat.Ref.	DN	D	D1	L
EMP1	25	25	60	10
EMP1.5*	40	37	80	10
EMP2*	50	50	100	10
EMP3*	80	75	120	12
EMP4*	100	100	155	12
EMP6*	150	150	210	12
EMP9	225	200	260	15
EMP12	300	300	360	15

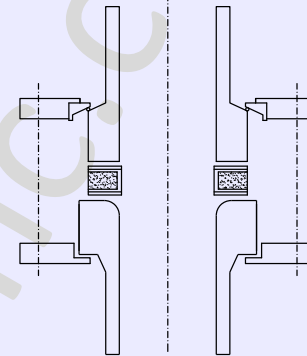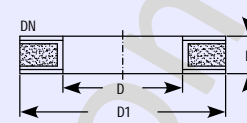


## HOSE CONNECTORS

Cat.Ref.	DN	d	L
PHC0.7/0.75	15	11	70
PHC1/1*	25	28	90
PHC1/0.75	25	22	90
PHC1/0.5	25	15	90
PHC1/0.25	25	11	90
PHC1.5/1	40	28	100
PHC1.5/0.75	40	22	100

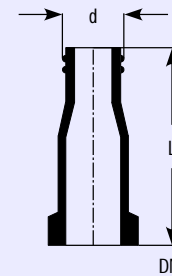

## BEND HOSE CONNECTORS

Cat.Ref.	DN	d	L
PBHC0.7/0.75	15	11	50
PBHC1/1*	25	28	60
PBHC1/0.75	25	22	60
PBHC1.5/0.75	40	22	75
PBHC2/0.75	50	22	100

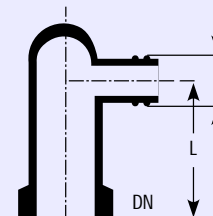

\* marked items are available fast.